

DO IT YOURSELF - FLOOR GRAPHIC INSTALLATION

STEP 1

A. Clean the surface you are going to be installing on. Make sure to brush away all dust.

B. Position the decal where you would like to install it using a measuring tape.



STEP 2


A. Once position of graphic has been established. Secure the graphic down in the center with 2 large pieces of masking tape.



STEP 3

A. Peel the premask and graphic back leaving just the wax paper behind.

*Make sure that all of your graphic is attached to the premask when peeling back.

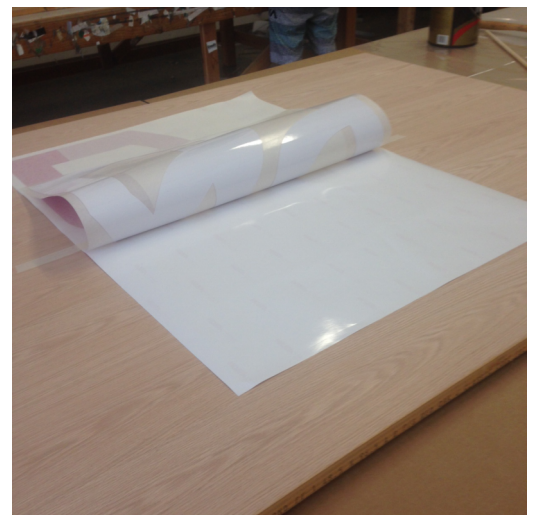

STEP 4

Using a scissor, cut the wax paper away. Be careful not to move your graphic out of position while cutting.



STEP 5

Using a squeegee or something similar with a flat edge, press the decal down firmly on to the wood. Start in the center of the graphic and work your way out/down from left to right.



STEP 6

A. Remove the masking tape and fold the other half of the decal back.



B. Remove the wax paper from the premask and graphic




C. Repeat Step 5



STEP 7

A. After graphic is set and firmly pressed into the wood remove the premask. Start from 1 corner and slowly peel back until premask is gone.

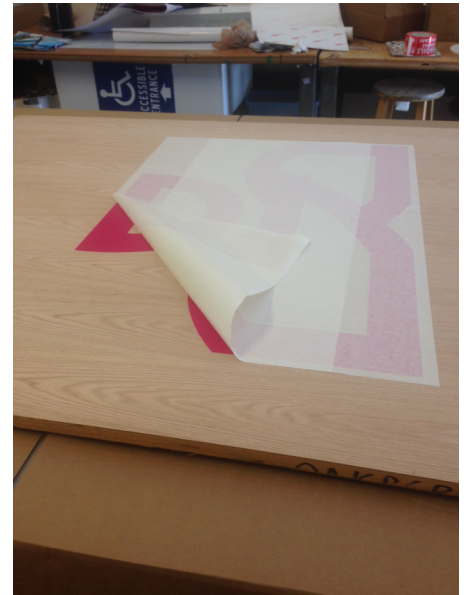

**FINISHED
PRODUCT!**